








INSTALLATION INSTRUCTIONS

2012-2014 HONDA CR-V
 FRONT RUNNER PART# FRHO-282-25

Qty	Hardware	Qty	Hardware
2	 Mounting Brackets	6	 Nut (M12)
2	 T-Bolt (M12X40)	6	 Lock Washer (M12)
4	 Screw (M12X30)	10	 Flat Washer (M12)



STEP1: Verify all parts are present. Read instructions carefully before starting installation.

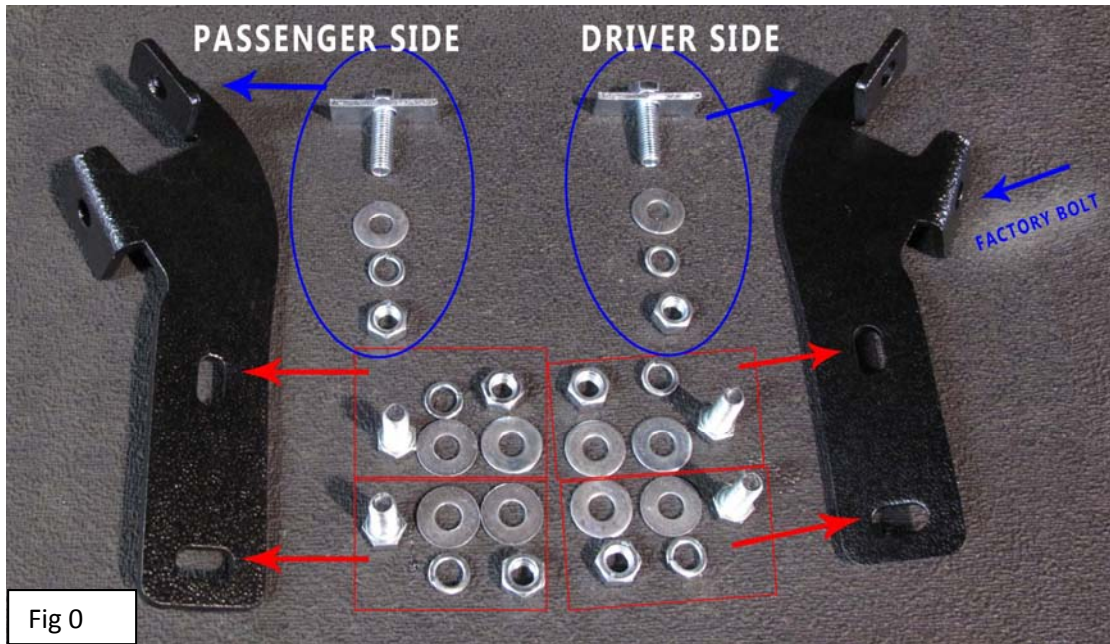


STEP2: Starting on the driver side, remove the Factory Bolt from the chassis (Fig1). Select the Driver Side Mounting Bracket, mount it with the Factory Bolt. Then secure the bracket on the tow hook with a T-Bolt, a Flat Washer, a Lock Washer and a Nut. [Tighten the Factory Bolt only and leave other hardware a bit loose.]



STEP3: Repeat step2 to install Passenger Side Mounting Bracket on the vehicle.

STEP4: Install the front bumper guard on the two mounting brackets, using 2 Screws, 4 Flat Washers, 2 Lock Washers and 2 Nuts on each side. (See Fig0) Tighten all hardware at this time.

Passenger Side Shown

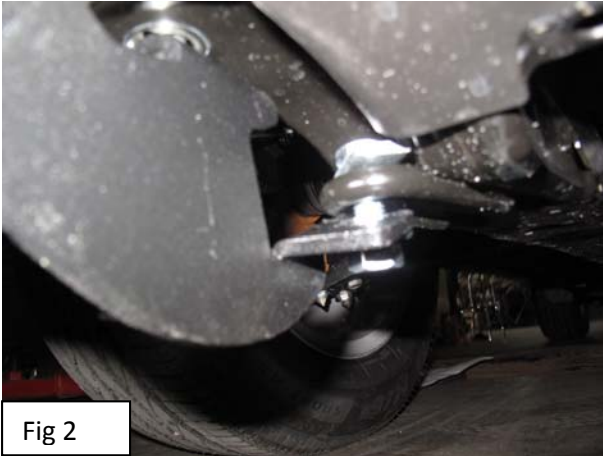

Driver Side Shown

