



**Fits:** 2018-2020 Chevy Traverse front Bumper Guard A-bar



PROFESIONAL INSTALLATION IS HIGHLY REQUIRED.



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.




READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM **45** TO **65** FOOT POUND.

SCAN  
OUR  
READER  
FOR  
MANUAL

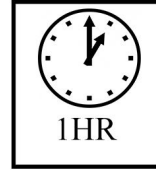

[INFO@BROADFEET.COM](mailto:INFO@BROADFEET.COM)



TEL: 718-302-1787


### STEP 1:

Open up the box of brackets and hardware to make sure you have all the items listed below before you initiate the installation.



### NOTE

Allways refer to the Bolt Pattern at every step of the entire installation for a successful work.

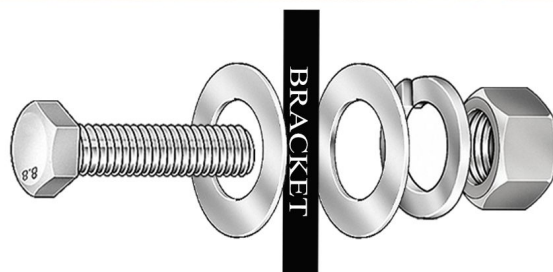



**Fits:** 2018-2020 Chevy Traverse front Bumper Guard A-bar

### STEP: 2

Begin by removing carefully the front under cover to initiate the install.



### STEP: 3


As shown in the picture. You have to use the chassis bolts in order to install the bracket. Notice that you should take off the chassis bolts before installing it then slide in the bracket and put them back on. follow the arrow to identify which bolts are being used in this step.







**Fits:** 2018-2020 Chevy Traverse front Bumper Guard A-bar

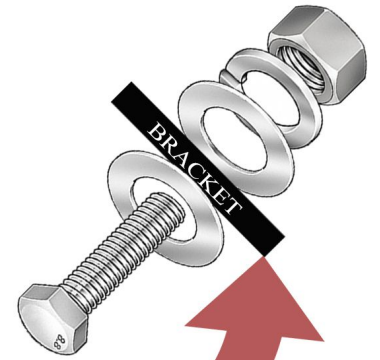

**NOTE**

The picture to the left is showing the left bracket installed and bolts being used to attach the leg to the bar.

**STEP: 4**



Continue with the other bracket and repeat same procedure. Once you have installed both right and left bracket. You should install back the under cover and make sure you trim it nicely so that you can clear the two bracket's way out.

