



Fits: 2020-22 Mercedes Benz GLB Front A-bar Bumper Protector



PROFESIONAL INSTALLATION IS HIGHLY RECOMMENDED!!!



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM **45** TO **65** FOOT POUND.

SCAN
OUR
READER
FOR
MANUAL



INFO@BROADFEET.COM



TEL: 718-302-1787

STEP 1:

Open up the box of brackets and hardware and make sure you have all the items are listed below before you initiate the installation.





Fits: 2020-22 Mercedes Benz GLB Front A-bar Bumper Protector



STEP 2:

Please follow the bolts pattern as it is showing in the image to the left.

STEP 3:

Remove the splash guards under the car to start the installation.

STEP 4:

The image below indicates where you should bolt on the U-bolts in order to hold tight the passenger bracket.




STEP 5:

The image to the right shows how the Driver Bracket should be mounted utilizing two U-Bolts.



Fits: 2020-22 Mercedes Benz GLB Front A-bar Bumper Protector

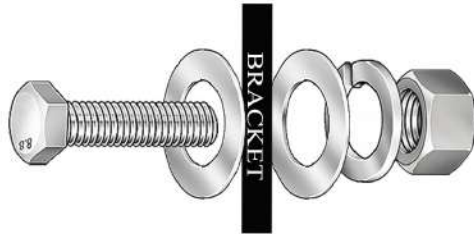

STEP 6:

As shown in the picture above. Line up the A-Bar's legs to the brackets where you will insert the screws and bolts together.

STEP 7:

Repeat STEP 6 on the other leg of the A-bar as it is showing on the picture to the right.



Always follow the bolts pattern at every step through the installation!!!





Fits: 2020-22 Mercedes Benz GLB Front A-bar Bumper Protector

STEP 7:

At this point your A-bar bumper protector should look like the one in the image below. Once the A-bar is in place. You should install back the splash guard and modify it so that the brackets clear its way out.

