



DCTO-765-32-S/B



Fits: 2019-22 Toyota Rav4 Front A-bar Bumper Protector



ALL TOOLS AND HARDWARE INCLUDED IN BOX



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM 45 TO 65 FOOT POUND.

SCAN OUR READER FOR MANUAL



1HR



Cutting is Required



Drilling is not Required



INFO@BROADFEET.COM




TEL: 718-302-1787

STEP 1:

Open up the box of brackets and hardware to make sure you have all the items listed below before you initiate the installation.



BOLT PATTERN FOR SUCCESSFUL INSTALLATION

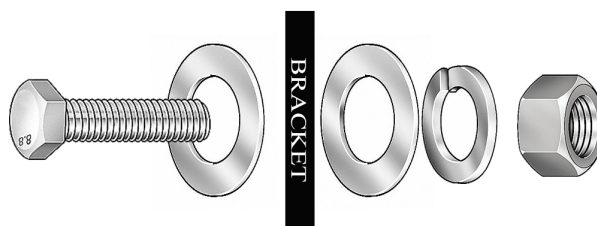



DCTO-765-32-S/B



Fits: 2019-22 Toyota Rav4 Front A-bar Bumper Protector



STEP: 2

Please remove the splash guard located under the chassis



STEP: 3

Insert U bolts and the Drop ins on right holes as shown on the image bellow.

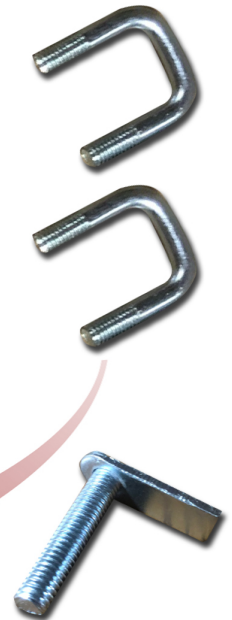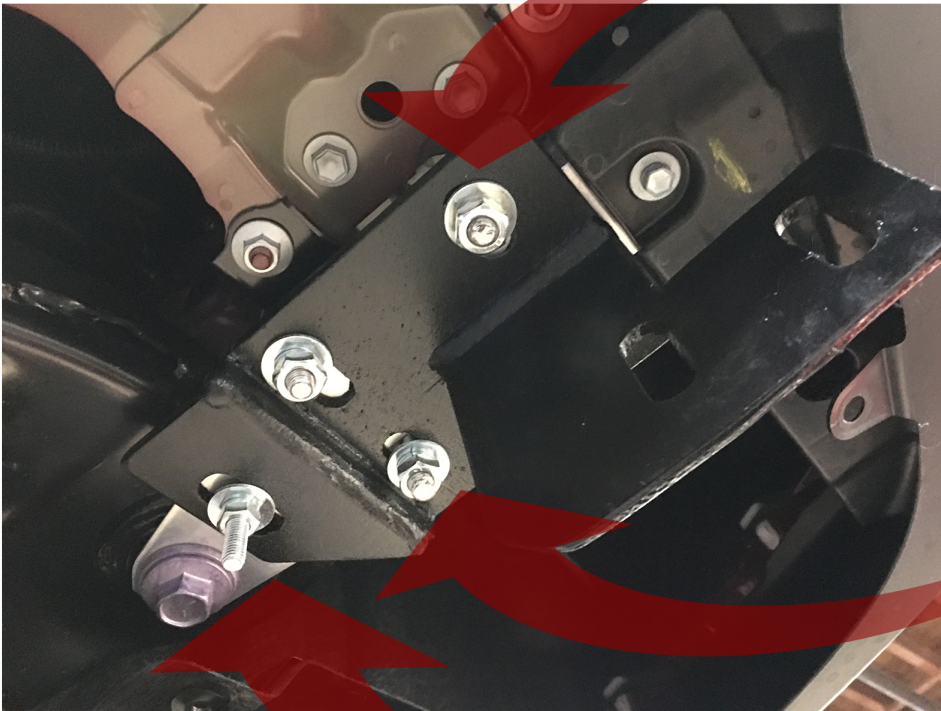




DCTO-765-32-S/B



Fits: 2019-22 Toyota Rav4 Front A-bar Bumper Protector

STEP: 4

Once you have installed both brackets properly, you should be able to align the legs of the abar to the brackets. Cutting is required at this point, and then mark areas to be cut for the abar's legs to get its way out.

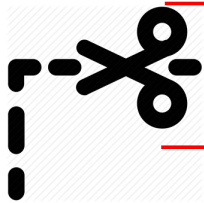

STEP: 5

By now, you should be done with the install. However, make sure every screw is fasten accordingly

REMINDER

