



Fits: 2020-22 Toyota Highlander Bull Bar With Skid Plate Bumper Protector



PLEASE USE ALL OF THE TOOLS REQUIRED FOR THIS INSTALLATION



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM **45** TO **65** FOOT POUND.

SCAN
OUR
READER
FOR
MANUAL



INFO@BROADFEET.COM



TEL: 718-302-1787


STEP 1:

Open up the box of brackets and hardware to make sure you have all the items listed below before you initiate the installation.



NOTE

Allways refer to the Bolt Pattern at every step of the entire installation for a successful work.

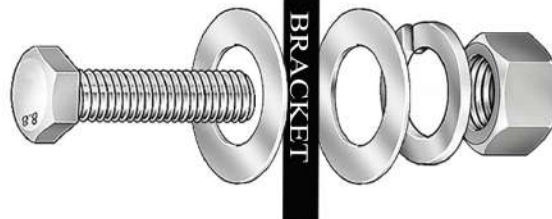



Fits: 2020-22 Toyota Highlander Bull Bar With Skid Plate Bumper Protector

STEP: 2

You will start by removing the front splash guards under the car which will uncover the tow holes needed to instal the brackets.



STEP: 3

The image below shows the passenger side bracket already in place. Please have a close look to the way it is installed and pay attention to the U-bolt and nuts.





Fits: 2020-22 Toyota Highlander Bull Bar With Skid Plate Bumper Protector

STEP: 4

In the picture to the right appears the passenger side bracket being installed to the chassis. Please always follow the bolt pattern.



STEP: 5

This is where the bumper guard will be attached.





Fits: 2020-22 Toyota Highlander Bull Bar With Skid Plate Bumper Protector

STEP: 6

The following picture shows the driver side bracket being installed. Notice that in the image shows exactly the same procedure as the passenger side one.



REMINDER



STEP: 7

After you have already installed both driver and passenger side brackets successfully. Continue by installing back the splash guard then make sure everything is in place and secured.



Fits: 2020-22 Toyota Highlander Bull Bar With Skid Plate Bumper Protector

STEP: 8

When installing the splash guard. You have to trim it so that brackets can clear its way out. Please use a marker to highlight where you will be cutting safely.



AT THIS POINT YOUR FRONT BUMPER PROTECTOR SHOULD LOOK LIKE THIS WHEN INSTALLED SUCCESSFULLY. IF YOU HAVE ANY CONCERN PLEASE CONTACT US AT THE NUMBER PROVIDED IN THE FIRST PAGE OR VISIT US AT BROADFEET.COM.

