



Fits: 2017-2021 Honda CRV Rear Double Layer



ALL TOOLS AND HARDWARE INCLUDED IN BOX



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM **45** TO **65** FOOT POUND.



3HR



No Cutting
Required



No Drilling
Required




INFO@BROADFEET.COM



TEL: 718-302-1787

STEP 1:

Open up the box of brackets and hardware to make sure you have all the items listed below before you initiate the installation.

	Spring Washers #8		Flat Washers # 12
	Hexagon Nut # 8		Bolts # 4
	Droppin Bolt #4		

BOLT PATTERN FOR SUCCESSFUL INSTALLATION





Fits: 2017-2021 Honda CRV Rear Double Layer



STEP: 2

After you have verified all of the hardware and brackets are completed. You are ready to begin the installation and start dropping down the muffler as shown in the image below.



STEP: 3


Once the muffler has been dropped down, you should be able to find the chassis holes where you will be inserting the droppings.



Fits: 2017-2021 Honda CRV Rar Double Layer

STEP: 4

After you have inserted the droppings you should be able to locate the brackets and follow the bolt pattern.

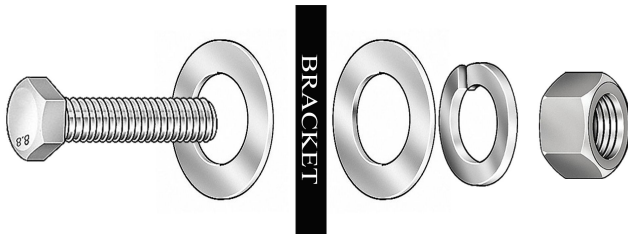

STEP: 5

Continue by installing the bar afetr you install the brackets and always make sure to utilise the bolt pattern in both sides for a proper installation.





Fits: 2017-2021 Honda CRV Rear Double Layer

STEP: 6

Once you have installed the brackets and bar properly. You will then put back up the muffler and your bumper guard will look like this.



NOTE

If you still have any other questions please contact us at the number located on Page 1 or visit our website WWW.BROADFEET.COM

