



Fits: 2019-2022 Hyundai Santa Fe R Series Running Boards




ALL TOOLS AND HARDWARE INCLUDED IN BOX



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM **45** TO **65** FOOT POUND.

SCAN
OUR
READER
FOR
MANUAL



3HR



Cutting is
Required



Drilling is not
Required



INFO@BROADFEET.COM




TEL: 718-302-1787

STEP:1

Open up the box of brackets and hardware to make sure you have all the items listed below before you initiate the installation.



BOLT PATTERN FOR SUCCESSFUL INSTALLATION

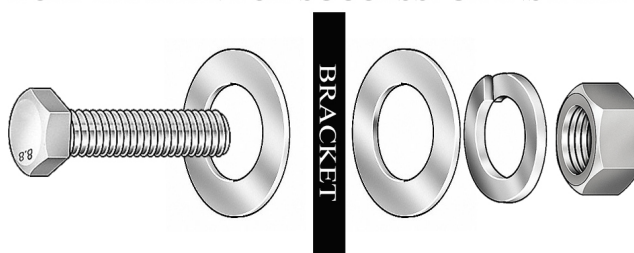




Fits: 2019-2022 Hyundai Santa Fe R Series Running Boards

STEP: 2

Start by removing the splash guards under the car to uncover the chassis holes.

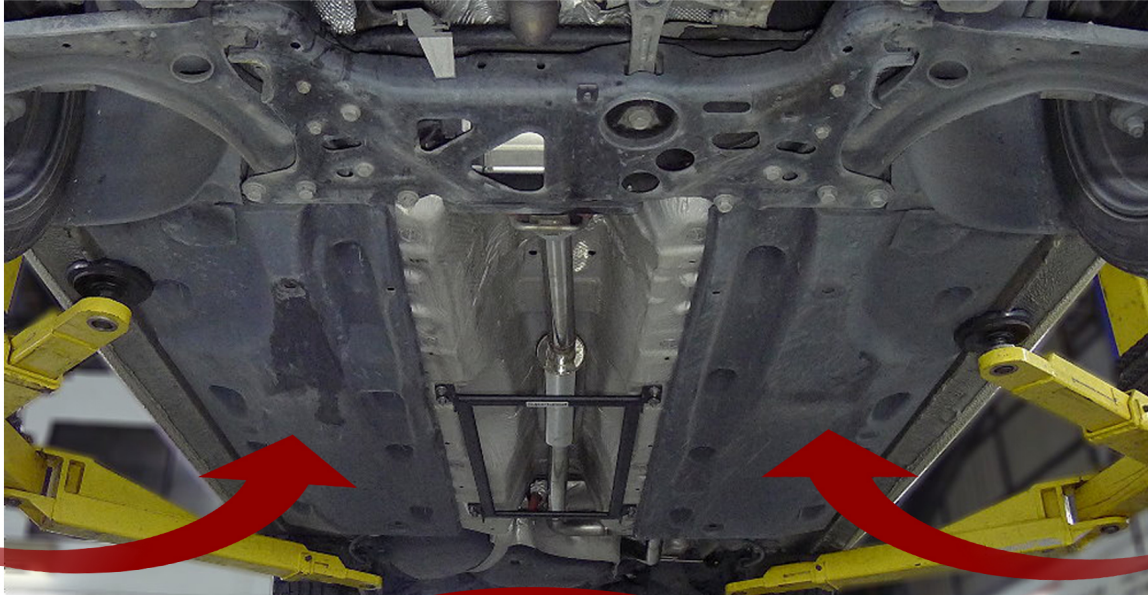

NOTE
Insert droppins



STEP: 3

The image to the right shows how the driver side front bracket is supposed to be installed.



Fits: 2019-2022 Hyundai Santa Fe R Series Running Boards



STEP:4

Continue with the middle bracket just like how it appears on the image to the left. On the other hand, you can notice that the lower cover is being trimmed so that the bracket clears.





Fits: 2019-2022 Hyundai Santa Fe R Series Running Boards



STEP: 5

Once you have installed the front, middle and rear brackets, adjust the screws located under the board. Remove the nuts and sit the board on top to aline it on right place.



FOR R66 LIGHTED RUNNING BOARD
STEP 1: PLEASE FIND THE DOME LIGHT
WIRE IN YOUR VEHICLE DOOR PANEL

STEP 2: CONNECT POWER AND GROUND
SUCCESSFULLY AND TEST
TO MAKE SURE LIGHTS TURN ON
PROPERLY



R66 INSTALLS
ONLY