



**Fits:** 2019-2022 Subaru Ascent R Series Running Boards



ALL TOOLS AND HARDWARE INCLUDED IN BOX



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.




DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM **45** TO **65** FOOT POUND.


SCAN  
OUR  
READER  
FOR  
MANUAL



3HR

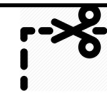

Cutting  
Required

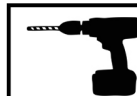

Drilling  
Required








INFO@BROADFEET.COM



TEL: 718-302-1787

### STEP 1:

Open up the box of brackets and hardware to make sure you have all the items listed below before you initiate the installation.

	Spring Washers #24		Flat Washers # 36
	Hexagon Nut # 24		Bolts # 12
	Droopin Bolt #12		

### BOLT PATTERN FOR SUCCESSFUL INSTALLATION





**Fits:** 2019-2022 Subaru Ascent R Series Running Boards

## STEP 2

Place all of the brackets and hardware in the order how appear in the picture below for a more successful installation.



## STEP 3

Highlighted marker hole indicate factory chassis hole to enlarged to 1/2" hole to insert drop pin



## STEP 4

Use a marker to highlight the areas where you will be drilling next.





**Fits:** 2019-2022 Subaru Ascent R Series Running Boards

**STEP 5**

Proceed to drill a hole enlargement  
to 1/2" size



**STEP 6**

Install the bracket as picture  
shown with Front  
Driver Side bracket



**STEP 7**

Please refer to the picture  
Shown with Middle bracket,  
Driver Side








**Fits:** 2019-2022 Subaru Ascent R Series Running Boards


### STEP 8

Plastic splashguard to be trimmed with 2"

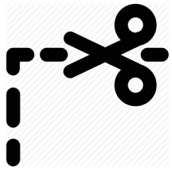


### STEP 9

Yellow marker indicate cutting line for splashguard for middle bracket

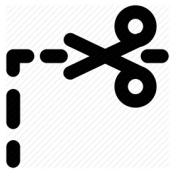

### STEP 10

Yellow marker indicate with cutting line for Front Driver side bracket

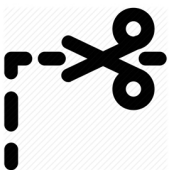





**Fits:** 2019-2022 Subaru Ascent R Series Running Boards

**STEP 11**

Install the Passenger side  
Rear Bracket the same  
way as shown in the  
picture




**STEP 12**

PLEASE TIGHTEN ALL BOLTS  
TO THE BEST OF YOUR ABILITY

YOUR RUNNING BOARDS HAS BEEN SUCCESSFULLY  
INSTALLED


PLEASE RE-INSTALL YOUR SPLASH GUARD AND MODIFY WHAT  
YOU NEED TO MAKE SURE YOUR BRACKETS FIT PROPERLY  
THROUGH THE SPLASH GUARD.

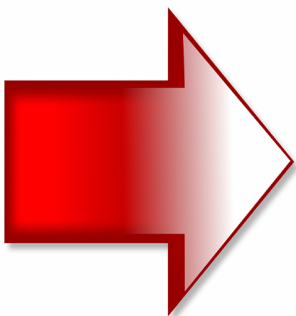



**Fits:** 2019-2022 Subaru Ascent R Series Running Boards

PLACE THE  
RUNNING  
BOARDS ON  
TOP OF THE  
BRACKETS  
AND MOUNT  
AS SHOWN

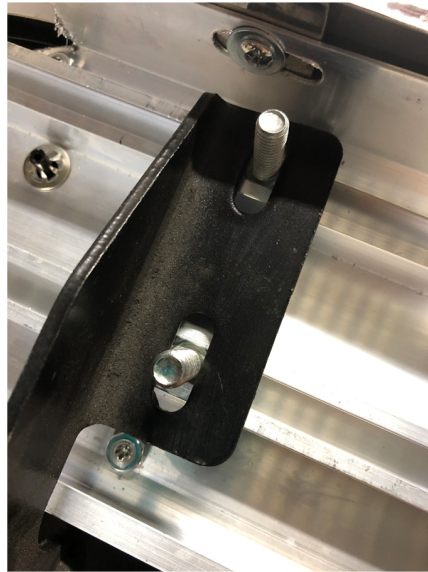

PLEASE SCREW BRACKETS WITH BOLTS AS SHOWN IN THE DIAGRAM TO THE LEFT



R66 INSTALL ONLY

FOR R66 LIGHTED RUNNING BOARD  
STEP 1: PLEASE FIND THE DOME LIGHT WIRE IN YOUR VEHICLE DOOR PANEL

STEP 2: CONNECT POWER AND GROUND SUCCESSFULLY AND TEST TO MAKE SURE LIGHTS TURN ON PROPERLY

